







Wireless Remote Shutter Release

Please read these operating instructions carefully before using the **PROMASTER SystemPRO Professional Wireless Remote Shutter Release**.


Package Contains:

- Transmitter x1
- Receiver x1
- CR-2 battery x1
- 23A battery x1
- Connecting cord x1
- English Instruction x1

 <p>Transmitter</p>	 <p>Receiver</p>	 <p>CR-2 Lithium battery</p>
 <p>23A battery</p>	 <p>Connecting cord</p>	 <p>Hot Shoe Converter (For SONY/ MINOLTA model only)</p>

Parts of Transmitter and Receiver.

	<p>1 - Battery Cover 2 - Power Switch 3 - Shutter Button 4 - Status LED 5 - Remote Socket</p>
---	---

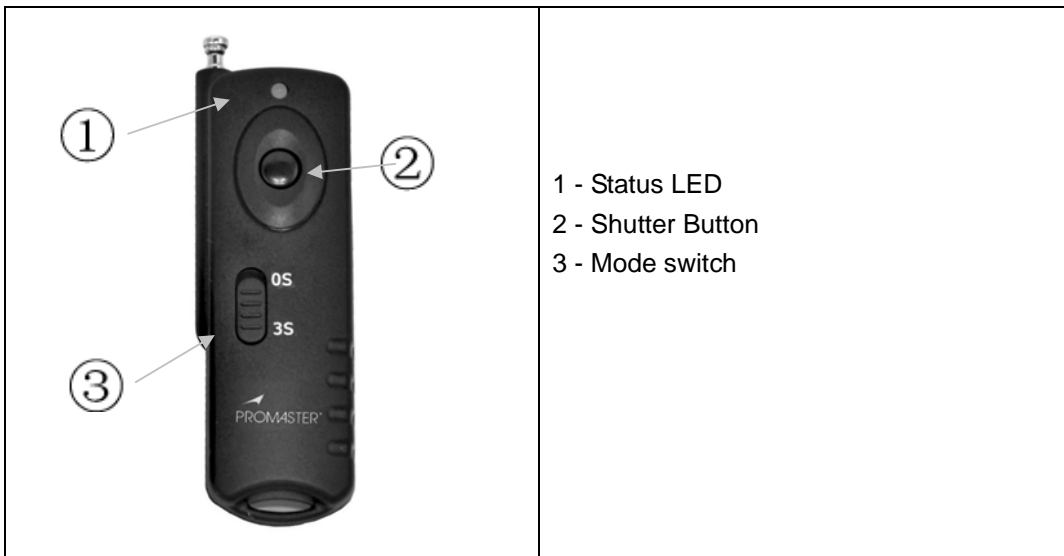

Replaces batteries:



Setting the Channel Code:



The PROMASTER Wireless Remote is designed for most of DSLR and SLR cameras that have a remote socket on the camera body. It allows you to easily create compelling close-ups from a safe and secure "line-of-sight" distance of up to 30 meters (100 feet). The receiver simply attaches to a compatible camera's accessory shoe and connects to the camera's remote socket with the supplied receiver cable. The receiver is powered by one CR-2 lithium battery and the transmitter is powered by one 23A battery.

Features:

Receiver:

- Battery Type: 1 x CR-2 lithium battery.
- Operating temperature: 5° C to 40° C (40° F to 105° F).
- Net Weight Approximately: 19g
- Dimensions: 47.5 X 38.0 X 21.9mm

Transmitter:

- Battery Type: 1 x 23A battery.
- Operating temperature: 5° C to 40° C (40° F to 105° F).
- Net Weight Approximately: 18g
- Dimensions: 81.90 X 27.3 X 14.5mm

Operating Instructions:

1. Turn OFF the power switch on the camera before inserting the connecting cord from the remote into the camera's remote socket.
2. Please make sure the transmitter and receiver are the same code setting.
3. Plug the connecting cord into the receiver remote socket and the camera remote socket.
4. Turn ON the power of the receiver and the camera.
5. Select Instant / Delay / Bulb release modes
 - For delayed release, set the mode switch of the transmitter to 3S. When you press the shutter button, the camera will take a picture after a 3-second delay.
 - For instant release, set the mode switch to 0S. When you press the shutter button, the camera will take a picture instantly.
 - For Bulb mode, set the mode switch to 0S. Press the shutter button of the transmitter for 5 seconds, the receiver will lock the shutter for BULB. To release the shutter lock, press the shutter button of the transmitter again, the receiver will unlock the shutter.
 - To focus, press the shutter button of transmitter half way.



PHOTOGRAPHIC RESEARCH ORGANIZATION, INC.
FAIRFIELD, CT 06825

www.promaster.com

*PROMASTER is a supplier of premium quality lenses,
digital camera memory, batteries and accessories, binoculars, filters,
digital and conventional electronic flashes, camera cases and tripods.*