

USER GUIDE

PARASYNC for iPod Touch 5G[®]

30-unit Charging and Synchronization Dock




For assistance, please contact PARAT Solutions

Toll free: 866-647-5976
Email: support@paratsolutions.com

PARASYNC for iPod Touch 5G®
30-unit Charging and Synchronization Dock

Product description:

Charge and sync up to 30 Apple iPod Touch 5G devices. Two auxiliary USB ports may be used to attach USB peripherals.

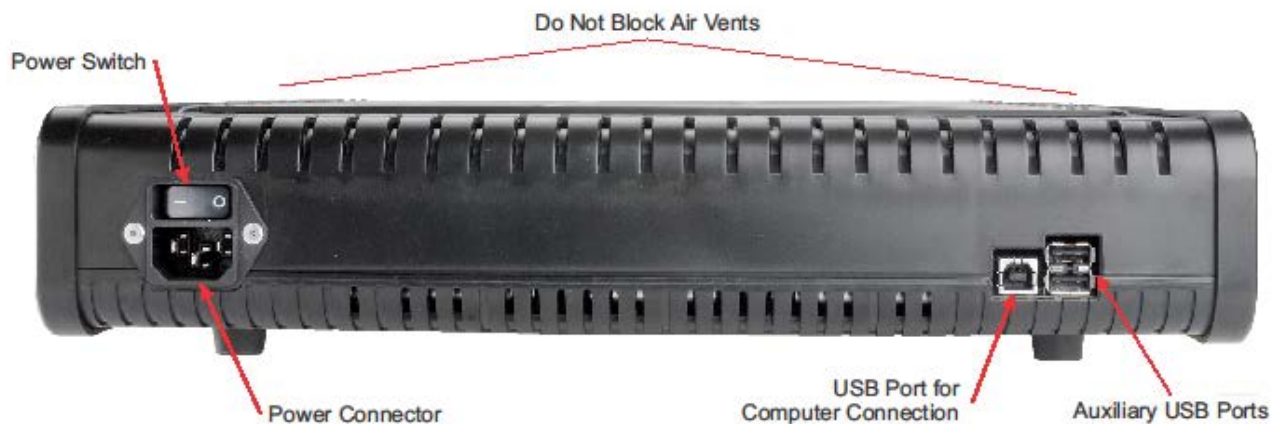

CAUTION


1. **If using a case, use only the approved PARASYNC PROTECTOR iPod Touch 5G case with the PARASYNC dock. An unapproved case can result in damage to the iPod and/or dock.** An un-cased iPod Touch 5G can be inserted into the dock.

Refer to the table below for approved case part numbers:


Model	Approved PARASYNC PROTECTOR case
iPod Touch 5G	Parat Solutions TH21, TH21NH

2. A PARASYNC dock loaded with thirty encased iPod Touch 5Gs can weigh up to 21 pounds. **Ensure that the surface holding the dock(s) can safely support 21 pounds per dock.**

3. Insert and remove each encased iPod Touch 5G in a vertical direction oriented as shown:

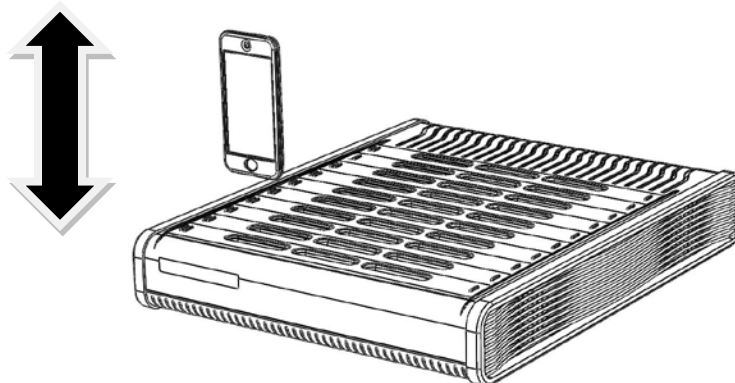


4. Do not stack items on top of the dock:

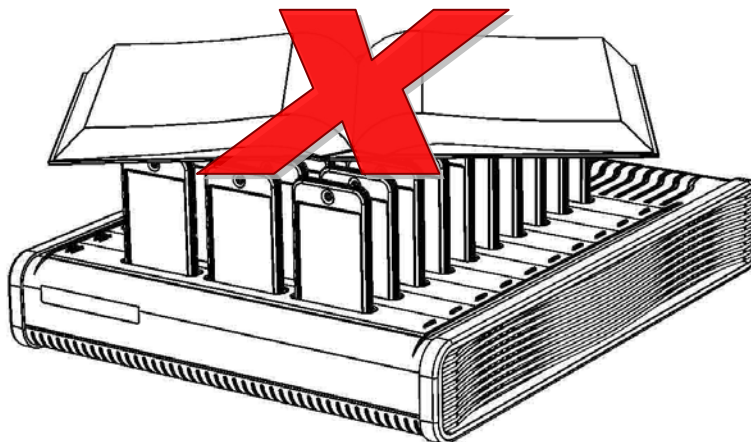


CASE ASSEMBLY

1. Open the case.

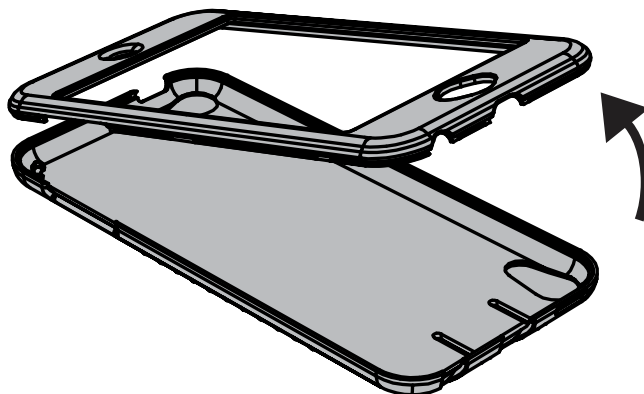


2. Place case front on flat surface face down, push down on back frame all around edges to engage snaps.

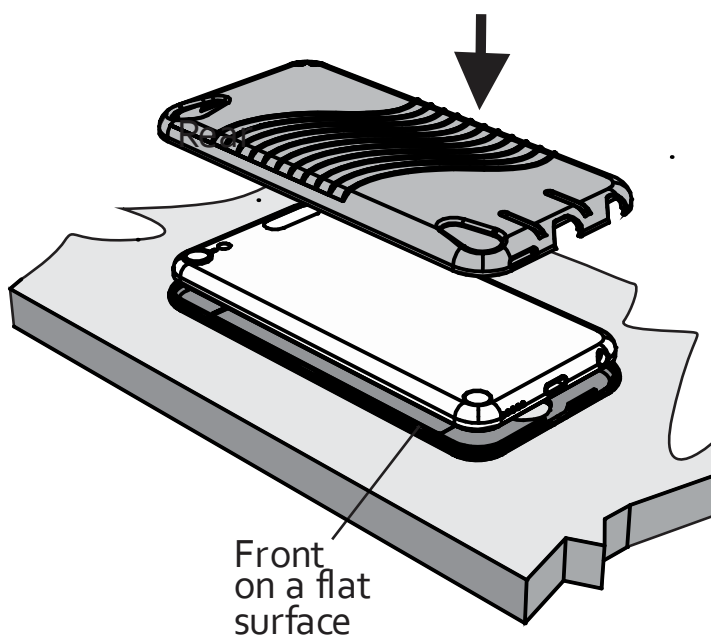

CASE DISASSEMBLY

To remove iPod touch 5G:

Pry apart as shown:

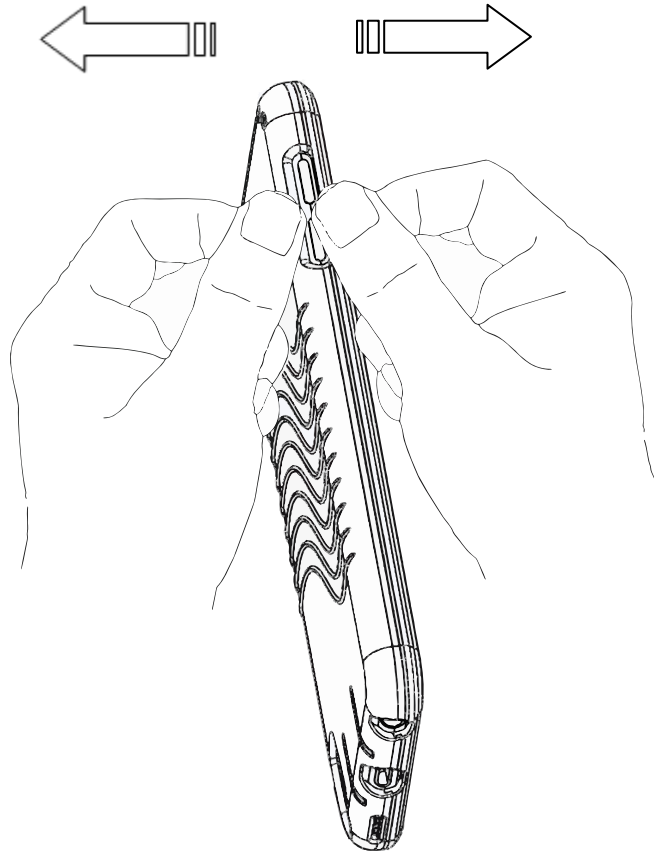

OPERATION

Recommended device settings:

<u>Model</u>	<u>Recommended settings when syncing with PARASYNC</u>
iPod touch 5G	Set “ Open iTunes when this iPod is connected ” option listed in iTunes on the Summary tab

To charge devices:

1. Connect the AC power cord to the dock and plug into a wall outlet providing 100-240VAC, 50/60Hz, 3.5 Amps.
2. Turn Power switch to the “ON” position.
3. Turn off each iPod Touch 5G and then insert **FIRMLY** into a slot.

Note: Each socket has a status indicator. Refer to section “Status Indications” below for more information.

To sync devices:

1. If the dock is already charging devices without a computer connection, skip to step 3.
2. Follow steps 1 through 3 from section “To charge devices”.
3. Connect the included USB cable from an Apple computer USB port to the USB port for computer connection on the dock.
4. Use Apple iTunes® or Apple Configurator® to sync devices.

Note: The devices may not charge while a computer is connected to the dock. You can charge the units without a computer by simply unplugging the USB cable to the computer **after** syncing completes.

Each socket has a status indicator. Refer to section “Status Indications” below for more information.

To turn the dock off:

1. If the dock is connected to a computer, verify that syncing operations are complete and then disconnect the dock from the computer.
2. Turn Power Switch to the “OFF” position.

Status Indications:


<u>Status</u>	<u>Display Function</u>
Steady Red	Charging
Steady Green	Charged/Socket Available
Blinking Violet	Computer connection/disconnection detected
Blinking Blue	Computer connection active

SECURE MOUNTING

The PARASYNC for iPod Touch 5G dock has features that allow for optional secure mounting to a firm surface.

To securely mount the dock:

1. Verify that the mounting surface can safely support 21 pounds per mounted dock.
2. Drill four holes in the mounting surface that line up with the four #6-32 threaded inserts on the bottom of the dock (see below for locations and dimensions in inches):

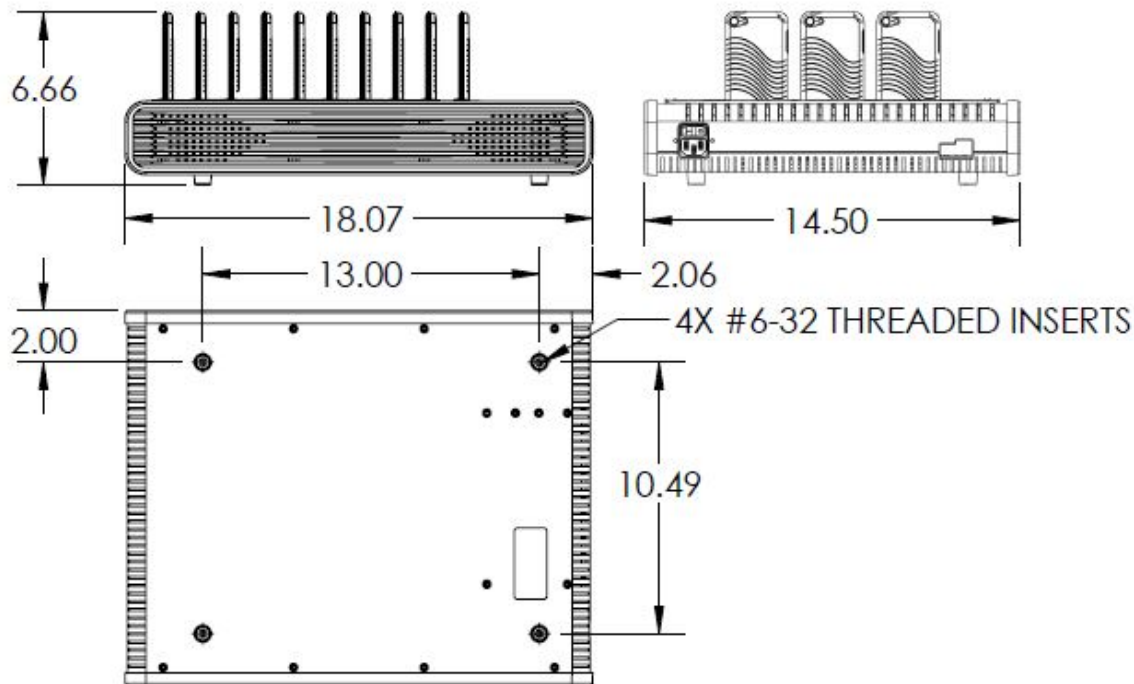

3. To secure the dock to the mounting surface:
 - A. Remove the four screws from the mounting feet.
 - B. Insert four #6-32 screws through the holes drilled in the mounting surface from step 2
 - C. Install screws into the threaded inserts on the bottom of the dock leaving the mounting feet in place.

NOTE: Maximum screw penetration into the dock measured from the bottom surface is 1/4".

Z410096 REV A